

CHANGE

NO. 1

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, D.C., 1 April 2001

**UNIT
MAINTENANCE MANUAL**

VOLUME 5 OF 5

**BRIDGE LAUNCHING CARRIER:
M104 WOLVERINE
(5420-01-430-5403)**

TM 5-5420-232-20-5, dated 01 March 2001, is changed as follows:

1. Remove old pages and insert new pages as indicated below.
2. New or changed material is indicated by a vertical bar in the margin of the page.

Remove Pages

A thru F
25-1 and 25-2
25-13 and 25-14
None
E-11/(E-12 blank)
G-11 and G-12
Index-5 and Index-6
None
Index-7 thru Index-10
None
Index-11 and Index-12
None
Index-31 and Index-32
Index-67 and Index-68
None
Index-69 thru Index-72
None
Index-79 and Index-80

Insert Pages

A thru F
25-1 and 25-2
25-13 and 25-14
25-81 thru 25-85/(25-86 blank)
E-11/(E-12 blank)
G-11 and G-12
Index-5 and Index-6
Index-6.1/(Index 6.2 blank)
Index-7 thru Index-10
Index-10.1/(Index 10.2 blank)
Index-11 and Index-12
Index-30.1/(Index 30.2 blank)
Index-31 and Index-32
Index-67 and Index-68
Index-68.1/(Index 68.2 blank)
Index-69 thru Index-72
Index-78.1/(Index 78.2 blank)
Index-79 and Index-80

DISTRIBUTION RESTRICTION STATEMENT C. Distribution authorized to U.S. Government agencies and their contractors for administrative or operational purposes only. This determination was made on 01 Jun 93. Other requests for this document shall be referred to: Commander, U.S. Army Tank-automotive and Armaments Command, ATTN: AMSTA-LC-CILT, Warren, MI 48397-5000.


DESTRUCTION NOTICE. Destroy by any method that will prevent disclosure of contents or reconstruction of the document.

File this change sheet in front of the publication for reference purposes.

By Order of the Secretary of the Army:

ERIC K. SHINSEKI
General, United States Army
Chief of Staff

Official:

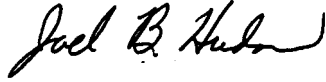A handwritten signature in black ink, appearing to read "Joel B. Hudson". The signature is fluid and cursive, with the first name "Joel" being the most prominent.

JOEL B. HUDSON
Administrative Assistant to the
Secretary of the Army
0103006

DISTRIBUTION: To be distributed in accordance with the initial distribution number (IDN) 256657
requirements for TM 5-5420-232-20-5

LIST OF EFFECTIVE PAGES

INSERT LATEST CHANGED PAGES. DESTROY SUPERSEDED PAGES.

Note: The portion of the text affected by the changes is indicated by a vertical line or an asterisk.

Dates of issue for original and changed pages are:

Original 0 1 March 2001

Change 1 1 April 2001

TOTAL NUMBER OF PAGES IN THIS PUBLICATION IS 1002, CONSISTING OF THE FOLLOWING:

Page No.	*Change No.	Page No.	*Change No.	Page No.	*Change No.
Front cover	0	19-27	0	19-75	0
BLANK	0	19-28	0	19-76	0
a	0	19-29	0	19-77	0
b	0	19-30	0	19-78	0
c	0	19-31	0	19-79	0
d	0	19-32	0	19-80	0
e	0	19-33	0	19-81	0
f	0	19-34	0	19-82	0
g	0	19-35	0	19-83	0
h	0	19-36	0	19-84	0
i	0	19-37	0	19-85	0
j	0	19-38	0	19-86	0
k	0	19-39	0	19-87	0
l	0	19-40	0	19-88	0
A	1	19-41	0	19-89	0
B	1	19-42	0	19-90	0
C	1	19-43	0	19-91	0
D	1	19-44	0	19-92	0
E	1	19-45	0	19-93	0
F	1	19-46	0	19-94	0
i	0	19-47	0	19-95	0
ii	0	19-48	0	19-96	0
19-1	0	19-49	0	19-97	0
19-2	0	19-50	0	19-98	0
19-3	0	19-51	0	19-99	0
19-4	0	19-52	0	19-100	0
19-5	0	19-53	0	19-101	0
19-6	0	19-54	0	19-102	0
19-7	0	19-55	0	19-103	0
19-8	0	19-56	0	19-104	0
19-9	0	19-57	0	19-105	0
19-10	0	19-58	0	19-106	0
19-11	0	19-59	0	19-107	0
19-12	0	19-60	0	19-108	0
19-13	0	19-61	0	19-109	0
19-14	0	19-62	0	19-110	0
19-15	0	19-63	0	19-111	0
19-16	0	19-64	0	19-112	0
19-17	0	19-65	0	19-113	0
19-18	0	19-66	0	19-114	0
19-19	0	19-67	0	19-115	0
19-20	0	19-68	0	19-116	0
19-21	0	19-69	0	19-117	0
19-22	0	19-70	0	19-118	0
19-23	0	19-71	0	19-119	0
19-24	0	19-72	0	19-120	0
19-25	0	19-73	0	19-121	0
19-26	0	19-74	0	19-122	0

*Zero in this column indicates an original page.

19-123	0	20-35	0	23-5	0
19-124	0	20-36	0	23-6	0
19-125	0	21-1	0	23-7	0
19-126	0	21-2	0	23-8	0
19-127	0	21-3	0	23-9	0
19-128	0	21-4	0	23-10	0
19-129	0	21-5	0	23-11	0
19-130	0	21-6	0	23-12	0
19-131	0	21-7	0	23-13	0
19-132	0	21-8	0	23-14	0
19-133	0	21-9	0	23-15	0
19-134	0	21-10	0	23-16	0
19-135	0	21-11	0	23-17	0
19-136	0	21-12	0	23-18	0
19-137	0	21-13	0	23-19	0
19-138	0	21-14	0	23-20	0
19-139	0	21-15	0	23-21	0
19-140	0	21-16	0	23-22	0
19-141	0	21-17	0	23-23	0
19-142	0	21-18	0	23-24	0
19-143	0	21-19	0	23-25	0
19-144	0	21-20	0	23-26	0
19-145	0	21-21	0	23-27	0
19-146	0	21-22	0	23-28	0
19-147	0	21-23	0	23-29	0
19-148	0	21-24	0	23-30	0
19-149	0	21-25	0	23-31	0
19-150	0	21-26	0	23-32	0
19-151	0	21-27	0	23-33	0
19-152	0	21-28	0	23-34	0
20-1	0	21-29	0	23-35	0
20-2	0	21-30	0	23-36	0
20-3	0	21-31	0	23-37	0
20-4	0	21-32	0	23-38	0
20-5	0	21-33	0	23-39	0
20-6	0	21-34	0	23-40	0
20-7	0	21-35	0	23-41	0
20-8	0	21-36	0	23-42	0
20-9	0	21-37	0	23-43	0
20-10	0	21-38	0	23-44	0
20-11	0	21-39	0	23-45	0
20-12	0	21-40	0	23-46	0
20-13	0	21-41	0	23-47	0
20-14	0	21-42	0	23-48	0
20-15	0	21-43	0	23-49	0
20-16	0	21-44	0	23-50	0
20-17	0	21-45	0	23-51	0
20-18	0	21-46	0	23-52	0
20-19	0	21-47	0	23-53	0
20-20	0	21-48	0	23-54	0
20-21	0	21-49	0	23-55	0
20-22	0	21-50	0	23-56	0
20-23	0	21-51	0	23-57	0
20-24	0	21-52 BLANK	0	23-58	0
20-25	0	22-1	0	23-59	0
20-26	0	22-2	0	23-60	0
20-27	0	22-3	0	23-61	0
20-28	0	22-4	0	23-62	0
20-29	0	22-5	0	23-63	0
20-30	0	22-6 BLANK	0	23-64	0
20-31	0	23-1	0	23-65	0
20-32	0	23-2	0	23-66	0
20-33	0	23-3	0	23-67	0
20-34	0	23-4	0	23-68	0

23-69	0	25-5	0	25-69	0
23-70	0	25-6	0	25-70	0
23-71	0	25-7	0	25-71	0
23-72	0	25-8	0	25-72	0
23-73	0	25-9	0	25-73	0
23-74	0	25-10	0	25-74	0
23-75	0	25-11	0	25-75	0
23-76	0	25-12	0	25-76	0
23-77	0	25-13	1	25-77	0
23-78	0	25-14	0	25-78	0
23-79	0	25-15	0	25-79	0
23-80	0	25-16	0	25-80	0
23-81	0	25-17	0	25-81 ADDED	1
23-82	0	25-18	0	25-82 ADDED	1
23-83	0	25-19	0	25-83 ADDED	1
23-84	0	25-20	0	25-84 ADDED	1
23-85	0	25-21	0	25-85 ADDED	1
23-86	0	25-22	0	25-86 BLANK	1
23-87	0	25-23	0	26-1	0
23-88	0	25-24	0	26-2	0
23-89	0	25-25	0	26-3	0
23-90	0	25-26	0	26-4	0
23-91	0	25-27	0	26-5	0
23-92	0	25-28	0	26-6	0
23-93	0	25-29	0	26-7	0
23-94	0	25-30	0	26-8	0
23-95	0	25-31	0	26-9	0
23-96	0	25-32	0	26-10 BLANK	0
24-1	0	25-33	0	27-1	0
24-2	0	25-34	0	27-2	0
24-3	0	25-35	0	27-3	0
24-4	0	25-36	0	27-4	0
24-5	0	25-37	0	27-5	0
24-6	0	25-38	0	27-6	0
24-7	0	25-39	0	27-7	0
24-8	0	25-40	0	27-8	0
24-9	0	25-41	0	27-9	0
24-10	0	25-42	0	27-10	0
24-11	0	25-43	0	27-11	0
24-12	0	25-44	0	27-12	0
24-13	0	25-45	0	27-13	0
24-14	0	25-46	0	27-14	0
24-15	0	25-47	0	27-15	0
24-16	0	25-48	0	27-16	0
24-17	0	25-49	0	27-17	0
24-18	0	25-50	0	27-18	0
24-19	0	25-51	0	27-19	0
24-20	0	25-52	0	27-20	0
24-21	0	25-53	0	27-21	0
24-22	0	25-54	0	27-22	0
24-23	0	25-55	0	27-23	0
24-24	0	25-56	0	27-24	0
24-25	0	25-57	0	27-25	0
24-26	0	25-58	0	27-26	0
24-27	0	25-59	0	27-27	0
24-28	0	25-60	0	27-28	0
24-29	0	25-61	0	27-29	0
24-30	0	25-62	0	27-30	0
24-31	0	25-63	0	27-31	0
24-32	0	25-64	0	27-32	0
25-1	0	25-65	0	27-33	0
25-2	1	25-66	0	27-34	0
25-3	0	25-67	0	27-35	0
25-4	0	25-68	0	27-36	0

27-37	0	28-7	0	28-71	0
27-38	0	28-8	0	28-72	0
27-39	0	28-9	0	28-73	0
27-40	0	28-10	0	28-74	0
27-41	0	28-11	0	28-75	0
27-42	0	28-12	0	28-76	0
27-43	0	28-13	0	28-77	0
27-44	0	28-14	0	28-78	0
27-45	0	28-15	0	28-79	0
27-46	0	28-16	0	28-80	0
27-47	0	28-17	0	28-81	0
27-48	0	28-18	0	28-82	0
27-49	0	28-19	0	28-83	0
27-50	0	28-20	0	28-84	0
27-51	0	28-21	0	28-85	0
27-52	0	28-22	0	28-86	0
27-53	0	28-23	0	28-87	0
27-54	0	28-24	0	28-88	0
27-55	0	28-25	0	28-89	0
27-56	0	28-26	0	28-90	0
27-57	0	28-27	0	28-91	0
27-58	0	28-28	0	28-92	0
27-59	0	28-29	0	28-93	0
27-60	0	28-30	0	28-94	0
27-61	0	28-31	0	28-95	0
27-62	0	28-32	0	28-96	0
27-63	0	28-33	0	28-97	0
27-64	0	28-34	0	28-98	0
27-65	0	28-35	0	28-99	0
27-66	0	28-36	0	28-100	0
27-67	0	28-37	0	28-101	0
27-68	0	28-38	0	28-102	0
27-69	0	28-39	0	28-103	0
27-70	0	28-40	0	28-104	0
27-71	0	28-41	0	28-105	0
27-72	0	28-42	0	28-106	0
27-73	0	28-43	0	28-107	0
27-74	0	28-44	0	28-108	0
27-75	0	28-45	0	28-109	0
27-76	0	28-46	0	28-110	0
27-77	0	28-47	0	28-111	0
27-78	0	28-48	0	28-112	0
27-79	0	28-49	0	28-113	0
27-80	0	28-50	0	28-114	0
27-81	0	28-51	0	28-115	0
27-82	0	28-52	0	28-116 BLANK	0
27-83	0	28-53	0	A-1	0
27-84	0	28-54	0	A-2	0
27-85	0	28-55	0	A-3	0
27-86	0	28-56	0	A-4	0
27-87	0	28-57	0	A-5	0
27-88	0	28-58	0	A-6 BLANK	0
27-89	0	28-59	0	B-1	0
27-90	0	28-60	0	B-2	0
27-91	0	28-61	0	B-3	0
27-92	0	28-62	0	B-4	0
27-93	0	28-63	0	B-5	0
27-94	0	28-64	0	B-6	0
28-1	0	28-65	0	B-7	0
28-2	0	28-66	0	B-8	0
28-3	0	28-67	0	B-9	0
28-4	0	28-68	0	B-10	0
28-5	0	28-69	0	B-11	0
28-6	0	28-70	0	B-12	0

B-13	0	D-9	0	G-11	0
B-14	0	D-10	0	G-12	1
B-15	0	E-1	0	Glossary-1	0
B-16	0	E-2	0	Glossary-2	0
B-17	0	E-3	0	Glossary-3	0
B-18	0	E-4	0	Glossary-4	0
B-19	0	E-5	0	Glossary-5	0
B-20	0	E-6	0	Glossary-6 BLANK	0
B-21	0	E-7	0	Index-1	0
B-22	0	E-8	0	Index-2	0
B-23	0	E-9	0	Index-3	0
B-24	0	E-10	0	Index-4	0
B-25	0	E-11	1	Index-5	0
B-26	0	E-12 BLANK	0	Index-6	1
B-27	0	F-1	0	Index-6.1 ADDED	1
B-28	0	F-2	0	Index-6.2 BLANK	1
B-29	0	F-3	0	Index-7	1
B-30	0	F-4	0	Index-8	0
B-31	0	F-5	0	Index-9	0
B-32	0	F-6	0	Index-10	1
B-33	0	F-7	0	Index-10.1 ADDED	1
B-34	0	F-8	0	Index-10.2 BLANK	1
B-35	0	F-9	0	Index-11	1
B-36	0	F-10	0	Index-12	1
B-37	0	F-11	0	Index-13	0
B-38	0	F-12	0	Index-14	0
B-39	0	F-13	0	Index-15	0
B-40	0	F-14	0	Index-16	0
B-41	0	F-15	0	Index-17	0
B-42	0	F-16	0	Index-18	0
B-43	0	F-17	0	Index-19	0
B-44	0	F-18	0	Index-20	0
B-45	0	F-19	0	Index-21	0
B-46	0	F-20	0	Index-22	0
B-47	0	F-21	0	Index-23	0
B-48	0	F-22	0	Index-24	0
B-49	0	F-23	0	Index-25	0
B-50	0	F-24	0	Index-26	0
B-51	0	F-25	0	Index-27	0
B-52	0	F-26	0	Index-28	0
B-53	0	F-27	0	Index-29	0
B-54	0	F-28	0	Index-30	0
B-55	0	F-29	0	Index-30.1 ADDED	1
B-56	0	F-30	0	Index-30.2 BLANK	1
C-1	0	F-31	0	Index-31	1
C-2	0	F-32	0	Index-32	0
C-3	0	F-33	0	Index-33	0
C-4	0	F-34	0	Index-34	0
C-5	0	F-35	0	Index-35	0
C-6	0	F-36	0	Index-36	0
C-7	0	F-37	0	Index-37	0
C-8	0	F-38	0	Index-38	0
C-9	0	F-39	0	Index-39	0
C-10	0	F-40 BLANK	0	Index-40	0
C-11	0	G-1	0	Index-41	0
C-12 BLANK	0	G-2	0	Index-42	0
D-1	0	G-3	0	Index-43	0
D-2	0	G-4	0	Index-44	0
D-3	0	G-5	0	Index-45	0
D-4	0	G-6	0	Index-46	0
D-5	0	G-7	0	Index-47	0
D-6	0	G-8	0	Index-48	0
D-7	0	G-9	0	Index-49	0
D-8	0	G-10	0	Index-50	0

Index-51	0
Index-52	0
Index-53	0
Index-54	0
Index-55	0
Index-56	0
Index-57	0
Index-58	0
Index-59	0
Index-60	0
Index-61	0
Index-62	0
Index-63	0
Index-64	0
Index-65	0
Index-66	0
Index-67	0
Index-68	1
Index-68.1 ADDED	1
Index-68.2 BLANK	1
Index-69	1
Index-70	1
Index-71	1
Index-72	0
Index-73	0
Index-74	0

Index-75	0
Index-76	0
Index-77	0
Index-78	0
Index-78.1 ADDED	1
Index-78.2 BLANK	1
Index-79	1
Index-80	1
Index-81	0
Index-82	0
Index-83	0
Index-84	0
Index-85	0
Index-86	0
Index-87	0
Index-88	0
Index-89	0
Index-90	0
Index-91	0
Index-92	0
Index-93	0
Index-94	0
Index-95	0
Index-96	0
Index-97	0
Index-98	0

Index-99	0
Index-100	0
Index-101	0
Index-102	0
Index-103	0
Index-104	0
Index-105	0
Index-106	0
Index-107	0
Index-108	0
Index-109	0
Index-110	0
Index-111	0
Index-112	0
Index-113	0
Index-114	0
Index-115	0
Index-116	0
Index-117	0
Index-118	0
Index-119	0
Index-120	0
Index-121	0
Index-122	0
Index-123	0
Index-124 BLANK	0

CHAPTER 25**LAUNCHER POWER UNIT (LPU) MAINTENANCE****CHAPTER INDEX**

PROCEDURE	PAGE
Alternator Replacement	25-2
Starter Replacement	25-4
Turbocharger Replacement	25-5
Fan Replacement	25-7
Fuel Injector Replacement	25-8
Serpentine Belt Replacement	25-9
Exhaust Pipe Replacement	25-10
Water Pump Belt/Pulley Replacement	25-11
Rear Shock Mount Replacement	25-12
Rated Speed Solenoid Replacement	25-13
Fuel Filter Assembly Replacement	25-14
Water Pump Replacement	25-15
Glow Plug Replacement	25-16
Front Shock Mount Replacement	25-17
Fuel Filter Element Replacement	25-18
Tachometer Sensor Replacement	25-19
Oil Pressure Switch Replacement	25-20
Coolant Temperature Sensor Replacement	25-21
Manifold Preheater Replacement	25-22
Tension Roller Replacement	25-23
Air Filter Assembly Replacement	25-24
Engine Oil / Filter Replacement	25-25
Radiator Replacement	25-26
Remote Oil Filter Adapter Replacement	25-28
Oil Filter Bracket Replacement	25-29
Pump Replacement	25-30
Injector Fuel Line Replacement	25-32
Fuel Pressure Regulator Replacement	25-33
Thermostat Replacement	25-34
Pump Coupling Replacement	25-35
Launcher Power Unit Replacement	25-38
Radiator Fan Guard Replacement	25-42
Fire/Overheat Detector Replacement	25-43
Fire Wire Mounting Plate Replacement	25-44
Wiring Harness 2W144-10 Replacement	25-46
Fuel Shut-Off Solenoid Replacement	25-50
LPU Ballistic Cover Replacement	25-51
LPU Cover Louver Door Replacement	25-52
LPU Cover Top Forward Door Replacement	25-53
LPU Cover Top Rear Access Door Replacement	25-54
LPU Cover Air Inlet Cover Replacement	25-55
LPU Cover Side Door Replacement	25-56
Hose (LPU Long Engine Oil) Replacement	25-57
Hose (LPU Short Engine Oil) Replacement	25-58
Hose (LPU Lower Radiator) Replacement	25-59

CHAPTER INDEX (Continued)

PROCEDURE	PAGE
Tube (LPU Air Inlet) Replacement	25-60
Hose (Launcher Power Unit Upper Radiator) Replacement	25-61
Oil Filter/Cooler Assembly (Launcher Power Unit) Replacement	25-62
Ground Hop Launcher Power Unit	25-64
Sponson Guards Replacement	25-68
Drain Valve (LPU Compartment) Replacement	25-69
Launcher Power Unit Guillotine Plate Replacement	25-70
LPU Compartment Fuel Sensor Replacement	25-72
LPU Fuel Tank Replacement	25-74
Control Box Replacement	25-76
Fuel Door Replacement	25-77
Fuel Door Repair	25-78
Hose (Launcher Power Unit Reservoir to Left Rear Fuel Tank) Replacement	25-79
Plate and/or Mounting Bracket (Left Rear Fuel Filler) Replacement	25-80
LPU Engine Rpm Check/Adjust	25-81
Clip Bracket (LPU Door Pin) Replacement	25-85

ALTERNATOR REPLACEMENT (Sheet 1 of 1)

TOOLS: General mechanic's tool kit: automotive (SC 5180-90-N26)

 
SUPPLIES: Self-locking nut (Item 503, Appendix G)

EQUIPMENT CONDITION: Launcher power unit removed (page 25-38)
Serpentine belt removed (page 25-9)

REMOVAL:**WARNING**

Hot exhaust pipe can cause severe burns.

1. REMOVE ALTERNATOR (1).
 - a. Remove nut (2), washer (3), and terminal lug (4) from terminal (5) on alternator (1).
 - b. Remove nut (6), washer (7), and two terminal lugs (8) from negative terminal (9) on alternator (1).
 - c. Remove nut (10), washer (11), and three terminal lugs (12) from positive terminal (13) on alternator (1).
 - d. Remove screw (14) and washer (15) from alternator (1) and upper mount (16).
 - e. Remove self-locking nut (17), two washers (18), and screw (19) from bottom mount (20). Remove alternator (1) from mount (20).
2. INSPECT PARTS FOR DAMAGE. REPLACE AS REQUIRED.

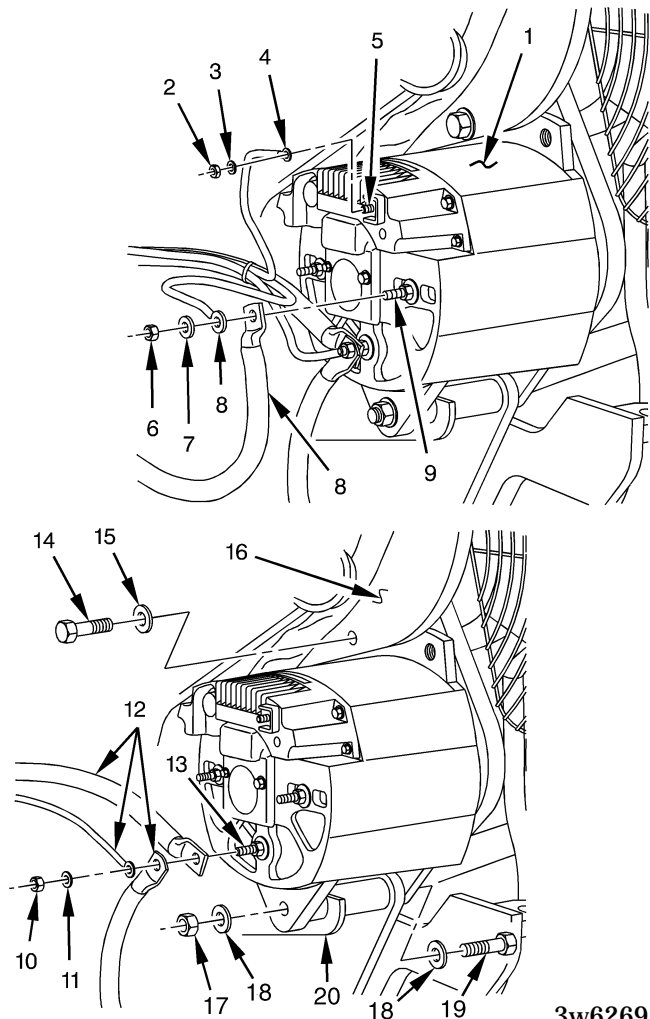

Go on to Sheet 2

3w6269

RATED SPEED SOLENOID REPLACEMENT (Sheet 1 of 1)

TOOLS: General mechanic's tool kit: automotive (SC 5180-90-N26)

SUPPLIES: Locknut (Item 105, Appendix G)
 Locknut (Item 103, Appendix G) (2 required)
 Electrical tiedown strap (Item 448, Appendix G) (2 required)

 
 
 
 
 
EQUIPMENT CONDITION: Outboard access door opened (TM 5-5420-232-10)
 Upper cover opened (TM 5-5420-232-10)

REMOVAL:

1. REMOVE RATED SPEED SOLENOID ASSEMBLY (1).
 - a. Remove two electrical tiedown straps (2) and disconnect solenoid connector (3) from engine control harness connector (4).
 - b. Remove screw (5), spacer (6), and locknut (7) from ball joint (8) and injector pump linkage (9).
 - c. Remove two locknuts (10), washers (11), and screws (12) from solenoid (1) and bracket (13).
 - d. Remove solenoid (1) from bracket (13).
2. INSPECT PARTS FOR DAMAGE. REPLACE AS REQUIRED.

INSTALLATION:

1. INSTALL SOLENOID (1).
 - a. Position solenoid (1) to bracket (13).
 - b. Install two new nuts (10), washers (11) and screws (12).
 - c. Install screw (5) through ball joint (8), spacer (6) and injector pump linkage (9).
 - d. Install new locknut (7) to screw (5).
 - e. Connect solenoid connector (3) to engine control harness connector (4). Install two new straps (2).
2. PERFORM LPU ENGINE RPM CHECK/ ADJUST (PAGE 25-81).
3. CLOSE OUTBOARD ACCESS COVER (TM 5-5420-232-10).
4. CLOSE UPPER COVER (TM 5-5420-232-10).

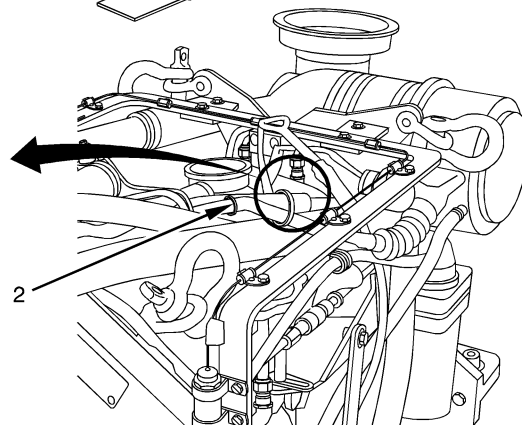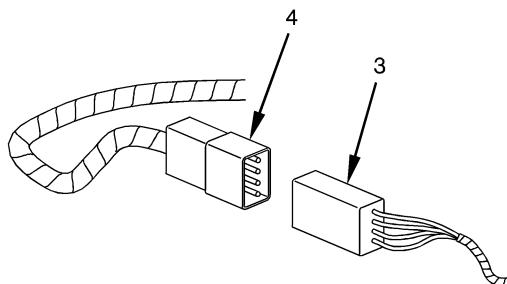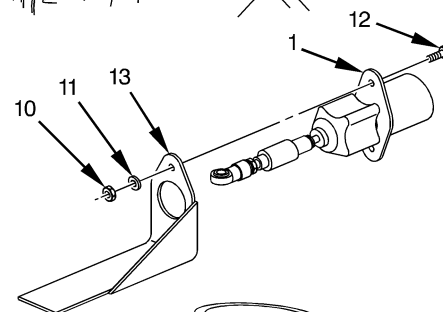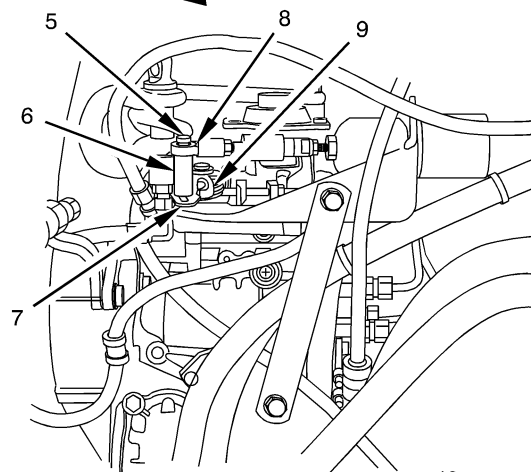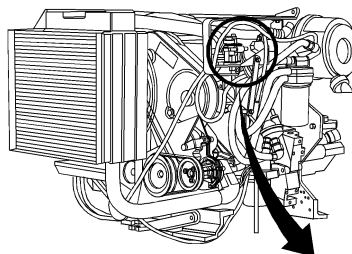

End of Task

3w6280

FUEL FILTER ASSEMBLY REPLACEMENT (Sheet 1 of 1)

TOOLS: General mechanic's tool kit: automotive (SC 5180-90-N26)

SUPPLIES: Packing, preformed (Item 241, Appendix G) (2 required)
Wiping rag (Item 94, Appendix C)

EQUIPMENT CONDITION: Top access doors opened (TM 5-5420-232-10)

REMOVAL:

1. REMOVE FUEL FILTER (1).
 - a. Remove two hose nuts (2) from elbows (3) on fuel filter (1).
 - b. Remove two screws (4), washers (5) and fuel filter (1) from bracket (6).
 - c. Loosen jamnuts (7) on elbows (3).
 - d. Remove elbows (3) and packings (8) from filter (1).
2. INSPECT PARTS FOR DAMAGE. REPLACE AS REQUIRED.

 
 
INSTALLATION:

1. INSTALL FILTER (1).

NOTE

Elbows (3) must be pointed down.

- a. Install elbows (3) and new packings (8) on filter (1).
 - b. Position elbows (3) pointed down and tighten jamnuts (7).
 - c. Position filter (1) on bracket (6) and install two screws (4) and washers (5).
 - d. Connect two hose nuts (2) to elbows (3).
2. CLOSE TOP ACCESS DOORS (TM 5-5420-232-10).

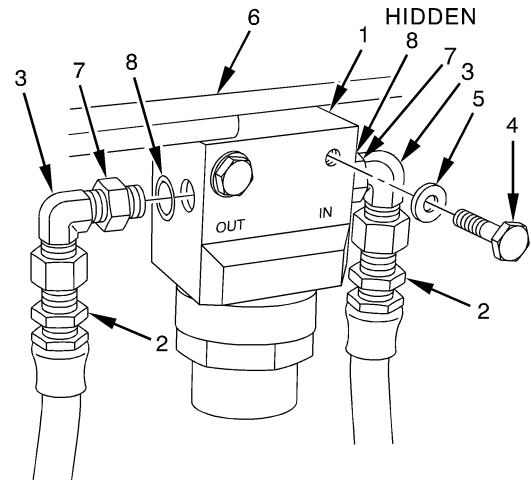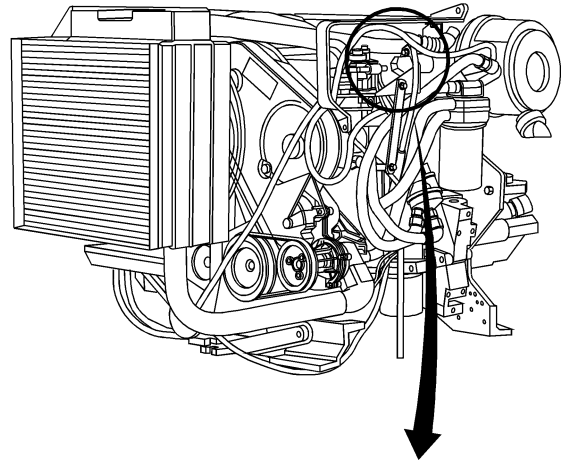

LPU ENGINE RPM CHECK/ADJUST (Sheet 1 of 4)

TOOLS: General mechanic's tool kit: automotive (SC 5180-90-N26)
 SPORT harness (Item 352, Appendix E)
 Test set, electronics system AN/PSM-95 (SPORT) (Item 347, Appendix E)

PERSONNEL: Two

 
 
EQUIPMENT CONDITION: Vehicle MASTER POWER set to OFF (TM 5-5420-232-10)

TEST AND INSPECTION:**NOTE**

If internal battery in SPORT is low, shutting off vehicle master power after SPORT has been turned on may cause SPORT to shut down inappropriately.

1. CONNECT SPORT.

- a. Connect SPORT harness P1 connector to ILECU TJ2 connector (1).
- b. Connect SPORT harness P2 connector to SPORT RS-232 SERIAL PORT connector.
- c. Connect keyboard cable connector to SPORT EXTERNAL KEYBOARD connector.
- d. Connect external power module DC OUTPUT cable connector to SPORT PWR connector.
- e. Connect SPORT NATO POWER CABLE to external power module DC INPUT jack.
- f. Connect SPORT NATO POWER CABLE connector to HPDU NATO connector (2).

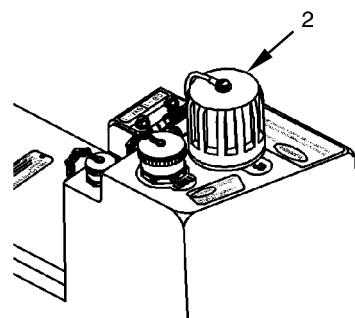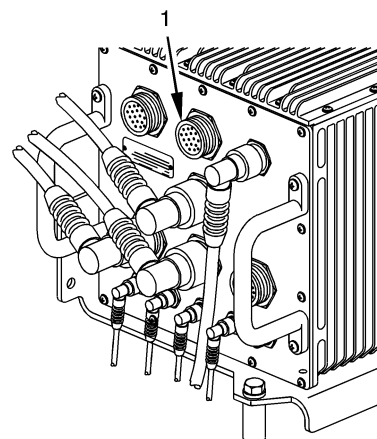

LPU ENGINE RPM CHECK/ADJUST (Sheet 2 of 4)

2. SET-UP/OPERATE SPORT.

- a. Set vehicle MASTER POWER pushbutton to ON position (TM 5-5420-232-10).
- b. Press LNCHR/POWER SYSTEMS pushbutton on Driver's Integrated Display (DID) (TM 5-5420-232-10).
- c. Press POWER SYSTEMS pushbutton on DID (TM 5-5420-232-10).
- d. Press NATO UTL PWR pushbutton until M is highlighted (TM 5-5420-232-10).
- e. Press OFF/ON pushbutton on SPORT.
- f. Wait approximately 2 minutes for WINDOWS 95 to bootup.
- g. From "START" menu select "Programs/Accessories/Hyperterminal" to open "Hyperterminal" folder.

NOTE

If there is an icon in the "Hyperterminal" dialog box named "hab_trim.ht", then double click icon to open program and go directly to main step CHECK LPU RPM.

- h. From "Hyperterminal" dialog box launch application "Hypertrm.exe" by double clicking it.
- i. In "Connection Description" dialog box type "hab_trim" under "Name".
- j. Click "OK".
- k. In "Phone Number" dialog box set "Connect using:" to "Direct to Com 2" using down arrow.
- l. Click "OK".
- m. In "Com 2 Properties" dialog box, set "Port Settings" as shown below using down arrow.
- n. "Bits per second" = 9600
- o. "Data bits" = 8
- p. "Parity" = none
- q. "Stop bits" = 1
- r. "Flow control" = Xon/Xoff
- s. Click "OK".
- t. Select "Save" from "File" menu to save settings.

Go on to Sheet 3

LPU ENGINE RPM CHECK/ADJUST (Sheet 3 of 4)**3. CHECK LPU RPM.**

- a. Start LPU and allow two minutes of run time for warm-up (TM 5-5420-232-10).
- b. Ensure that LPU is running at idle to check idle RPM (1200-1800 RPM), or OPS to check operating RPM (3850-4250 RPM).

NOTE

Only one RPM sample is displayed each time "w" is typed in and ENTER is pressed on keyboard. For any additional RPM samples, type in "w" and press ENTER again.

- c. Type in "w", then press ENTER on keyboard.

NOTE

The RPM readout will be displayed out of the usable screen area. Use the mouse and scroll bar to scroll up to line: INFO> QUERY_USER_PKG: THE CURRENT RPM IS ____.

 
 
- d. Record displayed RPM.
- e. Verify that recorded idle RPM is between 1200 and 1800 RPM for idle, or 3850-4250 RPM for OPS.

ADJUSTMENT:**WARNING**

Engine components are hot. Use precautions to prevent burns.

ADJUST THROTTLE SETTINGS.

- a. Operate LPU (TM 5-5420-232-10).
- b. Loosen jam nut (1) on idle speed set screw (2) and adjust idle speed to 1200 to 1800 RPM. Tighten jam nut (1).
- c. Loosen jam nut (3) on high speed set screw (4).
- d. Manually move throttle (5) until it contacts high speed set screw (4).
- e. While manually holding throttle (5) against high speed set screw (4), adjust screw (4) to obtain a speed of 3850 to 4250 RPM. Tighten jam nut (3).
- f. Shut down LPU (TM 5-5420-232-10).
- g. Loosen jam nuts (6), (7).
- h. Adjust overall length of throttle actuator linkage (8) so that when solenoid (9) is actuated, spring (10) extends 3/16-inch (0.48 cm). If rod end (11) of spring (10) was removed, reinstall a minimum of five turns.
- i. Tighten jam nuts (6), (7).
- j. With solenoid (9) not actuated, ensure that throttle (5) is against idle speed set screw (2).

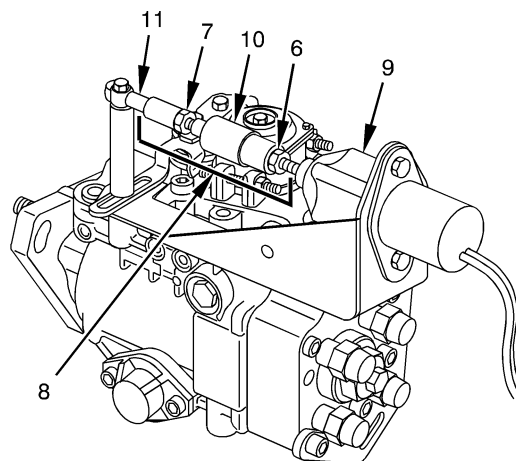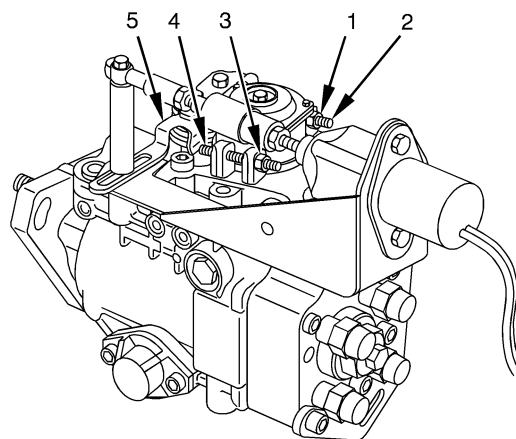

LPU ENGINE RPM CHECK/ADJUST (Sheet 4 of 4)

 
 
TEST AND INSPECTION:

1. SHUT DOWN SPORT.

- Select "Exit" from "File" menu to exit "hyperterminal".
- In "hyperterminal" dialog box click "Yes".
- Select "Close" from "File" menu to close "Hyperterminal" dialog box.
- Double click "Shutdown" icon to shutdown SPORT.
- In "SPORT System Shutdown" dialog box click "OK".
- When display shows "It's now safe to turn off your computer" press FNC pushbutton and then press and release OFF/ON pushbutton.
- Set vehicle MASTER POWER pushbutton to OFF (TM 5-5420-232-10).

2. DISCONNECT SPORT.

- Disconnect SPORT NATO POWER CABLE from HPDU NATO connector (1).
- Disconnect SPORT NATO POWER CABLE from external power cable DC INPUT jack.
- Disconnect external power module DC OUTPUT cable connector from SPORT PWR connector.
- Disconnect keyboard cable connector from SPORT EXTERNAL KEYBOARD CONNECTOR.
- Disconnect SPORT harness P2 connector from SPORT RS-232 SERIAL PORT.
- Disconnect SPORT harness P1 connector from ILECU TJ2 connector (2)

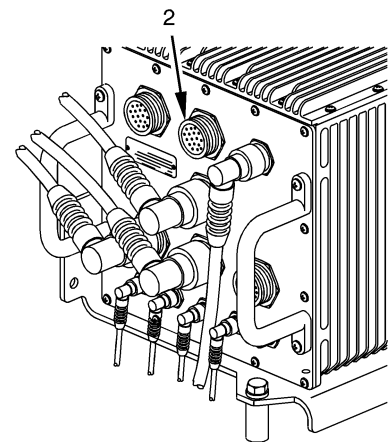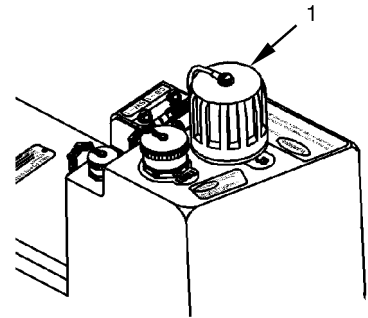

End of Task

3h1560

CLIP BRACKET (LPU DOOR PIN) REPLACEMENT (Sheet 1 of 1)

 
TOOLS: General mechanic's tool kit: automotive (SC 5180-90-N26)
 Socket, 3/8-inch drive, 9/16-inch (Item 235, Appendix E)
 Torque wrench, 0-60 N•m (Item 330, Appendix E)

REMOVAL:

1. REMOVE BRACKET (1).
 - a. Lift retainer (2) out of bracket (1). Turn retainer (2) up and out of way.
 - b. Remove two screws (3) and washers (4) from bracket (1) and door (5).
2. INSPECT PARTS FOR DAMAGE. REPLACE AS REQUIRED.

INSTALLATION:

1. INSTALL BRACKET (1).
 - a. Put bracket (1) in place on door (5). Loosely install two screws (3) and washers (4).
 - b. Slide bracket (1) back and forth, as needed, and put retainer (2) in bracket (1). Tighten screws (3) with wrench.
2. TORQUE SCREWS (3) BETWEEN 40-45 N•m (30-33 LB-FT).

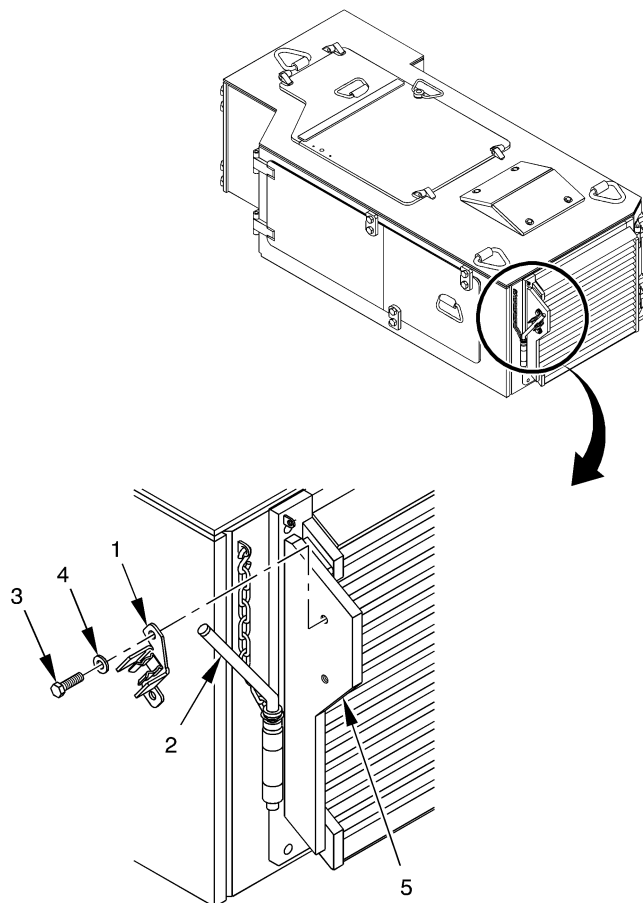

SECTION II. TOOLS LIST (Continued)

(1) Item No.	(2) Description	(3) NSN	(4) Reference
363	Crowfoot attachment, 3/8-inch drive, 7/16-inch	5120-01-335-1092	CTA 50-970
364	Crowfoot attachment, 3/8-inch drive, 7/8-inch	5120-00-181-6765	CTA 50-970
365	Eyebolt	5306-00-050-0346	CTA 50-970
366	Gloves, rubber, rolled edge	8415-00-266-8675	CTA 50-970
367	Crowfoot attachment, 3/8-inch drive, 17-millimeter	5120-00-355-1688	CTA 50-970
368	Die set, metal stamping, alphabetical and numerical, 3/16-inch	5110-00-293-1905	CTA 50-970

SECTION II. REPLACEMENT PARTS LIST (Continued)

(1) Item No.	(2) Description	(3) Part Number
475	Washer, key	MS15820-1
476	Washer, lock	DIN128-A16-FST-A3C
477	Washer, lock	MS35338-138
478	Washer, lock	DIN6796-12-FST-A3C
479	Washer, lock	DIN127-A6-FST-A3C
480	Washer, lock	12387272-38
481	Washer, lock	12387381-36
482	Washer, lock	MS35338-104
483	Washer, lock	12387272-44
484	X-washer	7404624
485	X-washer	7404671
486	Ring, retaining	D67-3161
487	Nut, self-locking	95615A210
488	Gasket	028175757
489	Washer	N0138326
490	Locknut	95615A160
491	Gasket	028115441C
492	Seal	N0138123
493	Decal	98GD064
494	Gasket	028103483H
495	Gasket	028103533
496	Retaining ring	MS16625-4475
497	Ring	MS28774-214
498	Packing, preformed	MS83248/1-140
499	Packing, preformed	MS83248/1-140
500	Washer, lock	DIN127-A10-FST-A3C
501	Washer, lock	DIN128-A12-FST-A3P
502	Locknut	93795A210
503	Locknut	95615A210
504	O-ring	068130139
505	Cap, Protective, Dust	MS90376-24Y
506	Nut, self-locking	MS51922-15
507	Nut, self-locking	MS51922-23
508	Nut, self-locking	12387349-32
509	Lockwasher	12387272-43
510	Nut, self-locking	12387349-35
511	Cap, Protective, Dust	MS90376-14R
512	Washer, lock	MS35338-45
513	Tubing, rubber	ZZH601
514	Screw, cap	12387270-58
515	Washer, flat	12387327-1
516	O-ring	M83248/2-912
517	Screw, cap	B1821BH038C300N
518	Washer, flat	12548872
519	Washer, flat	12549051
520	O-ring	MS28775-216
521	Shim	12549081
522	Pin, spring	12387355-36
523	Bolt, self-locking	12274178
524	Pin, spring	MS16562-38
525	Pad, cushioning	12548785
526	Nonmetallic special seal	9376298-3
527	tubing, nonmetallic	12345162

SECTION II. REPLACEMENT PARTS LIST (Continued)

(1) Item No.	(2) Description	(3) Part Number
528	Bearing, sleeve	12548795-1
529	Strap, webbing	12919000-3
530	Washer, lock	20-13-1
531	Lockwasher	MS35338-47
532	Switch, electrical impact wrench	1042
533	Repair kit, electric impact wrench	57K1733
534	Cable, power, electric impact wrench	2306
535	Gasket	12466655
536	O-ring	MS28778-4
537	Washer, lock	DIN6796-10-FST-A3P
538	Pin, spring	ISO8752-6X25-FST
539	Washer, lock	12387269-37
540	Nut, self-locking	MS21044C3
541	Washer, lock	MS35338-141
542	Washer, lock	20-22-1
543	Nut, self-locking	12387349-39
544	Screw, drive	12387333-46
545	Seal	LSCP580158
546	Seal	LSCP580157

**Subject, Page
B (Continued)**

Bellcrank and Bellcrank Assembly
(Continued)
Removal, 15-13

Bellcrank Assembly, Bellcrank and
Installation, 15-14
Removal, 15-13

Bellcrank, Rear Service Brake
Installation, 12-95
Removal, 12-95

Bellcrank, Service Brake
Installation, 12-87
Removal, 12-86

Bellows, Feedback Control Assembly
Protection
Installation, 5-89
Removal, 5-88

Bellows, Left or Right Parking Brake Lock
Control Assembly Protection
Installation, 12-41
Removal, 12-40

Bellows, Left or Right Rear Parking Brake
Control Assemblies Protection
Installation, 12-43
Removal, 12-42

Bellows, Parking Brake Release Control
Assembly Protection
Installation, 12-39
Removal, 12-39

Belt, Driver's Vehicular Safety
Installation, 19-97
Removal, 19-97

Belt, Serpentine
Installation, 25-9
Removal, 25-9

Belt, Vehicular Safety (Seat)
Installation, 19-101
Removal, 19-101

Bending Flexible Hoses, F-19

Bevel Gearshaft
Installation, 19-76
Removal, 19-76

Bilge Pump Unit Tube Assembly, Metallic
Bent Tube, and Rubber Hoses
Assembly, 22-4
Disassembly, 22-3

**Subject, Page
B (Continued)**

Blade, Windshield Wiper
Installation, 21-36
Removal, 21-36

Bleed Actuator Lever Assembly and Inlet
Guide Vane Actuator Link
Installation, 5-93
Removal, 5-92

Bleed Air Inlet Metallic Bent Tube, Hose
(Bent Tube to NBC Heat Exchanger), and
Hose (Bent Tube to Venturi Air Circulating
Duct)
Installation, 28-68
Removal, 28-68

Bleed Air Inlet Overtemperature Rotary
Switch
Installation, 28-65
Removal, 28-65

Bleed Air Tube and Hose Assembly
Installation, 4-60
Removal, 4-60

Bleed Air Tube Insulation
Installation, 28-70
Removal, 28-70

Bleed Hydraulic System
Bleed, 23-96

Bleed Valve Rod
Installation And Adjustment, 5-112
Removal, 5-112

Bleeder Valve
Installation, 7-213
Removal, 7-213

Bleeding and Checking for Leaks, F-18

Block (Rear Arm Travel Lock)
Installation, 17-197
Removal, 17-197

Block, Actuator and Mounting
Installation, 17-208
Removal, 17-206

Block, Gage
Installation, 17-86
Removal, 17-86

Block, Number 1 Left or Right Fender Skirt
Installation, 18-143
Removal, 18-143

**Subject, Page
B (Continued)**

Blocks, Use of Safety Wood, F-23

Body, Fuel Nozzle Insert or Fuel Nozzle
Installation, 5-28
Removal, 5-27

Bolt, Eye
Installation, 23-73
Removal, 23-73

Bolt, Locking
Installation, 18-206
Removal, 18-206

Bolt, Ribbed Shouldered Hub
Installation, 13-84
Removal, 13-83

Bolts, Loose or Missing Hub
Removal, 13-158

Boot, NBC Tube Assembly and Duct
Inspection, 28-9

Bottle Assembly, Crew Compartment Valve
And
Installation, 27-24
Removal, 27-21

Bottle Assembly, Engine Compartment Valve
And
Installation, 27-30
Removal, 27-26

Bottle Assembly, Fire Extinguisher Valve and,
F-23

Bottle Assembly, LPU Fire Extinguisher Valve
and
Installation, 27-43
Removal, 27-42

Bottom Sound Suppressor
Installation, 19-152
Removal, 19-151

Box, Close Access to Bottom of Plenum and
Air
Close Access, 6-54

Box, Control
Installation, 25-76
Removal, 25-76

Box, Disconnect Panel Junction
Installation, 9-118
Removal, 9-117

**Subject, Page
B (Continued)**

Box, Gain Access to Bottom of Plenum and Air
Gain Access, 6-32

Box, Grenade
Installation, 19-120
Removal, 19-120

Box, Inlet Air
Installation, 6-6
Removal, 6-6

Box, Oddment
Installation, 19-118
Removal, 19-118

Box, Oil Cooler Fan Accessory Gear
Installation, 8-13
Removal, 8-12

Bracket
Installation, 9-412
Removal, 9-411

Bracket (Chemical Detector)
Installation, 24-28
Removal, 24-28

Bracket Assembly (Pioneer Rack), Tool
Installation, 18-223
Removal, 18-223

Bracket Assembly, Bump Stop
Installation, 13-165
Removal, 13-165

Bracket Assembly, Control
Installation, 15-16
Removal, 15-15

Bracket Assembly, Support
Installation, 27-38
Removal, 27-37

Bracket, Check Valve Mounting
Installation, 21-33
Removal, 21-33

Bracket, Clip
LPU Door Pin
Installation, 25-85
Removal, 25-85

ORS Fuel Cover Pin
Installation, 17-86.4
Removal, 17-86.4

Precleaner Door
Installation, 18-36.1
Removal, 18-36.1

**Subject, Page
(Continued)**

Bracket, Commander's Control Panel and
Installation, 9-388
Removal, 9-388

Bracket, Commander's Intercom Control Box
and
Installation, 9-394
Removal, 9-394

Bracket, Digital Electronic Control Unit
(DECU) Mounting
Installation, 9-95
Removal, 9-95

Bracket, Driver's Intercommunication Control
Unit and
Installation, 21-45
Removal, 21-44

Bracket, Driver's Seat Subframe, Rigid
Connecting Link, and Pivot
Installation, 19-89
Removal, 19-88

Bracket, Electrical Connector Angle
Installation, 7-231
Removal, 7-230

Bracket, Engine Cable
Installation, 15-21
Removal, 15-20

Bracket, Flashlight Mounting
Installation, 19-146
Removal, 19-146

Bracket, Flat Spring Cap Screw and Angle
Installation, 19-82
Removal, 19-82

Bracket, Front Fuel Inlet Cover Clip
Installation, 7-71
Removal, 7-71

Bracket, Front Parking Brake Control
Assembly Mounting
Installation, 12-59
Removal, 12-58

Bracket, Front Service Brake Cable Mounting
Installation, 12-99
Removal, 12-99

Bracket, Grenade Launcher Angle
Installation, 18-219
Removal, 18-219

**Subject, Page
B (Continued)**

Bracket, Headrest Mounting
Installation, 19-94
Removal, 19-94

Bracket, Heater Mounting
Installation, 21-7
Removal, 21-7

Bracket, Helical Spring and Mounting (Air
Bleed Butterfly Valve)
Installation, 5-119
Removal, 5-119

Subject, Page
B (Continued)

Subject, Page

Bracket, Hose Support Mounting
 Installation, 7-258
 Removal, 7-258

Bracket, Hydraulic Heat Exchanger and
 Mounting
 Installation, 23-83
 Removal, 23-82

Bracket, Inlet Guide Vane Angle Indicator
 Installation, 5-91
 Removal, 5-91

Bracket, Left or Right Fender Skirt Support
 or Strut Mounting
 Installation, 18-155
 Removal, 18-155

Bracket, Left Or Right Headlight Mounting
 Installation, 9-132
 Removal, 9-132

Bracket, Left or Right Parking Brake Lock
 Angle
 Installation, 12-60
 Removal, 12-60

Bracket, Left or Right Side Pin Assembly
 Angle
 Installation, 18-125
 Removal, 18-125

Bracket, Left Parking Brake Control
 Quadrant, Helical Spring, and Angle
 Installation, 12-49
 Removal, 12-48

Bracket, Left Side Oil Cooler Fan Upper
 Mounting
 Installation, 8-32
 Removal, 8-32

Bracket, Left Side Oil Cooler Lower Angle
 Fan
 Installation, 8-33
 Removal, 8-33

Bracket, Left Side Oil Cooler Mounting
 Installation, 8-30
 Removal, 8-30

Bracket, Lower Side Wiring Harness
 Installation, 9-49
 Removal, 9-47

Bracket, LPU Circuit Breaker and
 Installation, 9-399
 Removal, 9-398

**Subject, Page
B (Continued)**

Bracket, LPU Fire Extinguisher Manual Control Handle, Bellcrank, Remote Control Lever, and
Installation, 27-74
Removal, 27-72

Bracket, LPU Regulator and
Installation, 9-397
Removal, 9-397

Bracket, Number 1 Left or Right Fender Skirt Strut and
Installation, 18-138
Removal, 18-137

Bracket, Number 3 or Number 4 Left or Right Skirt Mounting Bracket or Angle
Installation, 18-145
Removal, 18-144

Bracket, Number 4 or Number 5 Left or Right Skirt Mounting
Installation, 18-147
Removal, 18-146

Bracket, Number 5 or Number 6 Left or Right Skirt Mounting
Installation, 18-149
Removal, 18-148

Bracket, Number 6 Left Skirt Mounting
Installation, 18-150
Removal, 18-150

Bracket, Number 6 Right Skirt Mounting
Installation, 18-151
Removal, 18-151

Bracket, Oil Filter
Installation, 25-29
Removal, 25-29

Bracket, Orifice Assembly Connector and Angle
Installation, 24-8
Removal, 24-8

Bracket, Parking Brake Control Pedal and Mounting
Assembly, 12-26
Disassembly, 12-25

Bracket, Parking Brake Lock Riser
Installation, 12-62
Removal, 12-61

**Subject, Page
B (Continued)**

Bracket, Parking Brake Rear Control Assemblies Brace Mounting
Installation, 12-33
Removal, 12-33

Bracket, Parking Brake Rear Control Assemblies Mounting
Installation, 12-29
Removal, 12-27

Bracket, Plate and/or Mounting (Left Rear Fuel Filler)
Installation, 25-80
Removal, 25-80

Bracket, Pressure Fluid Filter Double Angle
Installation, 5-85
Removal, 5-84

Bracket, Pulse Jet System (PJS) Prioritization Valve Mounting
Installation, 28-103
Removal, 28-103

Bracket, Pulse Jet System (PJS) Utility Bus Coupler (UBC) 2T631 And
Installation, 9-85
Removal, 9-84

Bracket, Radiac
Installation, 9-396
Removal, 9-396

Bracket, Rail
Installation, 19-102
Removal, 19-102

Bracket, Rear Fuel Tank Cover Clip
Installation, 7-164
Removal, 7-164

Bracket, Rear Service Brake
Installation, 12-100
Removal, 12-100

Bracket, Remote Switching Module (RSM) 2A103 And Analog Input Module (AIM) 2A110 Mounting
Installation, 9-101
Removal, 9-101

Bracket, Right Parking Brake Control Quadrant, Helical Spring, and Angle
Installation, 12-46
Removal, 12-46

Bracket, Right Side Oil Cooler Mounting
Installation, 8-31

Subject, Page B (Continued)

Bracket, Right Side Oil Cooler Mounting (Continued)
Removal, 8-31

Bracket, Steering
Installation, 14-38
Removal, 14-38

Bracket, Stoplight Switch Assembly And Electrical
Installation, 9-122
Removal, 9-120

Bracket, Temperature Controller Angle
Installation, 9-89
Removal, 9-89

Bracket, Valve, Adapter And
Installation, 24-23
Removal, 24-23

Bracket, Water Separator Mounting
Installation, 7-252
Removal, 7-251

Brackets Welding
Welding, 18-183

Brackets, Damaged
Removal, 18-180

Brackets, Launch Control Handle (LCH) And
Installation, 9-389
Removal, 9-389

Brackets, Locate
Locate, 18-181

Brackets, Plenum and Air Box and Mounting
Installation, 6-44
Removal, 6-37

Brackets, Right Engine Compartment Fuel Tank Heat Shield Assembly and Angle
Installation, 7-100
Removal, 7-98

Brackets, Right Side Oil Cooler Fan Mounting
Installation, 8-34
Removal, 8-34

Brake Apply Shaft Cover Assembly
Installation, 10-6
Removal, 10-4

Brake Pack Running Clearance
Adjust, 10-9
Assembly, 10-11
Disassembly, 10-7

Subject, Page B (Continued)

Branched Wiring Harness 2W104-8
Installation, 9-200
Removal, 9-200

Branched Wiring Harness 2W105-1 (Left Side)
Installation, 9-202
Removal, 9-202

Branched Wiring Harness 2W105-1 (Right Side)
Installation, 9-201
Removal, 9-201

Branched Wiring Harness 2W107-8
Installation, 9-206
Removal, 9-206

Branched Wiring Harness 2W108-8
Installation, 9-209
Removal, 9-209

Branched Wiring Harness 2W109-8
Installation, 9-210
Removal, 9-210

Branched Wiring Harness 2W111-7
Installation, 9-215
Removal, 9-214

Branched Wiring Harness 2W112-8
Installation, 9-217
Removal, 9-216

Branched Wiring Harness 2W114-8
Installation, 9-218
Removal, 9-218

Branched Wiring Harness 2W118-9
Installation, 9-223
Removal, 9-222

Branched Wiring Harness 2W125-8
Installation, 9-231
Removal, 9-230

Branched Wiring Harness 2W157
Assembly, 9-255
Disassembly, 9-254
Installation, 9-253
Removal, 9-252

Branched Wiring Harness 2W158-7
Installation, 9-257
Removal, 9-256

Branched Wiring Harness 2W158-8
Installation, 9-259

**Subject, Page
B (Continued)**

Branched Wiring Harness 2W158-8
(Continued)
Removal, 9-258

Branched Wiring Harness 2W160-1
Installation, 9-267
Removal, 9-266

Branched Wiring Harness 2W701-9
Installation, 9-327
Removal, 9-327

Branched Wiring Harness 2W702-7
Installation, 9-330
Removal, 9-328

Branched Wiring Harness 3W104-9
Installation, 9-357
Removal, 9-353

Breather, Check Valve, and Straight Adapter
Installation, 7-180
Removal, 7-179

Bridge Advance Unit
Installation, 17-135
Removal, 17-133

Bridge Advance Unit Motor/Gearbox
Installation, 17-132
Removal, 17-132

Bridge Advance Unit Multi-Turn Resolver
Installation, 17-120
Removal, 17-120

Bridge Drive Lifter Bracket, Screw, or Swivel
Installation, 17-154
Removal, 17-154

Bridge Drive Manifold
Installation, 17-146
Removal, 17-145

Bridge Support Roller
Installation, 17-185
Removal, 17-185

Broken Left or Right Final Drive Cam
Headed Straight Pin or Disconnect Cam
Installation, 11-17
Removal, 11-15

Brush Guard (Left Spade System)
Installation, 20-30
Removal, 20-30

Brush Guard (Right Spade System)
Installation, 20-31

Index-10 Change 1

**Subject, Page
B (Continued)**

Brush Guard (Right Spade System)
(Continued)
Removal, 20-31

Built-in Diagnostics Fault Message Index,
3-27

Bulkhead Plate (Harness Interface)
Installation, 17-86.3
Removal, 17-86.3

Bump Stop Bracket Assembly
Installation, 13-165
Removal, 13-165

Bushing, Slide, Pushrod and
Installation, 18-198
Removal, 18-197

C

Cable 2W210-8 or 2W211-8
Installation, 9-276
Removal, 9-275

Cable Assemblies, Negative And Positive
Battery Lug Terminals And
Installation, 9-166
Removal, 9-161

Cable Assembly 2W170, Power
Installation, 9-270
Removal, 9-270

Cable Assembly 2W171, Power
Installation, 9-271
Removal, 9-271

Cable Assembly 2W172, Power
Installation, 9-272
Removal, 9-272

Cable Assembly 3W101-2, Starter Special
Cable Assembly 3W101-1 Or Power
Installation, 9-335
Removal, 9-332

Cable Assembly 3W102-1 Or 3W102-2,
Generator Special
Installation, 9-345
Removal, 9-342

Cable Assembly 3W108, Starter Relay Power
Installation, 9-371
Removal, 9-370

Subject, Page
C (Continued)

Cable Assembly 3W109, Starter Relay Power
Installation, 9-373
Removal, 9-372

Cable Assembly, Control
Installation, 15-9
Removal, 15-6

Cable Assembly, Engine Fuel Control
Installation, 15-19
Removal, 15-18

Cable Assembly, LPU Compartment Fire
Extinguisher Control
Adjust, 27-71
Installation, 27-70
Removal, 27-68

Cable Assembly, Transmission
Installation, 15-23
Removal, 15-22

Cable, Negative (LPU)
Installation, 9-403
Removal, 9-403

Cable, Positive (LPU)
Installation, 9-402
Removal, 9-402

Calibration Marker
Installation, 17-86.1
Removal, 17-86.1

Calibration, NH Trim
Set Nh Trim, 9-96

Cam Actuated Electrical Fuel Pump, Fueling
Manifold, and Fuel Line Shield
Installation, 7-28
Removal, 7-25

Cam, Broken Left or Right Final Drive Cam
Headed Straight Pin or Disconnect
Installation, 11-17
Removal, 11-15

Cap
Installation, 17-63
Removal, 17-63

Cap Assembly and Compressed Helical
Springs
Installation, 19-7
Removal, 19-3

Cap for 2W170, Protective
Installation, 9-414

Subject, Page
C (Continued)

Cap for 2W170, Protective (Continued)
Removal, 9-414

Cap (Hydraulic Module Cover)
Installation, 23-56
Removal, 23-56

Cap, NATO Connector Protective
Installation, 9-410
Removal, 9-410

Subject, Page C (Continued)

Carriage, Roller
Installation, 17-140
Removal, 17-140

Case Drain Tube Assembly
Installation, 23-18
Removal, 23-18

Cavity, Fill, 18-175

Centering, Transmission Steer
Adjust, 10-12

Centrifugal Bilge Pump Unit
Installation, 22-2
Removal, 22-1

Centrifugal Governor
Installation, 10-21
Removal, 10-19

Check Torque on Left or Right Final Drive
Torque Check, 11-17

Check Valve
Installation, 5-9
Removal, 5-9
Installation, 21-30
Removal, 21-30
Installation, 17-84
Removal, 17-84

Check Valve (Charge Pump Pressure Tube)
Installation, 23-49
Removal, 23-49

Check Valve (LPU Compartment Fire
Extinguisher)
Installation, 27-80
Removal, 27-80

Check Valve and Tee
Installation, 23-94
Removal, 23-93

Check Valve Mounting Bracket
Installation, 21-33
Removal, 21-33

Circuit Breaker Access Cover
Installation, 9-106
Removal, 9-106

Circuit Breaker Access Cover Hinge
Installation, 9-107
Removal, 9-107

Subject, Page C (Continued)

Circuit Breaker Access Cover Identification
Plate
Installation, 9-108
Removal, 9-108

Clamp (Antenna)
Installation, 26-9
Removal, 26-9

Clamp Assembly, Pulse Jet System (PJS) Air
Cleaner
Installation, 6-29
Removal, 6-28

Clamp, Sponson Syncro
Installation, 18-61
Removal, 18-61

**Subject, Page
C (Continued)**

Clamp, Syncro
Installation, 18-60
Removal, 18-60

Clamps, Bearing Feed Tube Assemblies
Installation, 5-162
Removal, 5-162

Cleaning and Installing Items to Maintain
Hardness Critical Integrity, F-4

Cleaning Electrical Components, F-2

Cleaning Mechanical Parts, F-2

Cleaning Wand Adapter
Installation, 4-57
Removal, 4-57

Clearance, Brake Pack Running
Adjust, 10-9
Assembly, 10-11
Disassembly, 10-7

Clevis Link or Clevis Rod End
Adjust, 19-108
Installation, 19-108
Removal, 19-108

Clevis, Front or Rear Protection Bellows and
Rod End
Installation, 14-11
Removal, 14-9

Clevis, Left or Right Parking Brake Manual
Control Lever Rod End
Installation, 12-36
Removal, 12-36

Clevis, Left or Right Parking Brake
Quick-Release Pin Rod End
Installation, 12-38
Removal, 12-37

Clevis, Parking Brake Release Control
Assembly Rod End
Installation, 12-35
Removal, 12-34

Clip Bracket
LPU Door Pin
Installation, 25-85
Removal, 25-85
ORS Fuel Cover Pin
Installation, 17-86.4
Removal, 17-86.4

**Subject, Page
(Continued)**

Clip Bracket (Continued)
Precleaner Door
Installation, 18-36.1
Removal, 18-36.1

Close Access to Bottom of Plenum and Air Box
Close Access, 6-54

Close Access to NBC Heat Exchanger,
Tubeaxial Fan, and Discharge Fan,, 28-42

Close Access to Number 1 Left or Right
Suspension Torsion Bar, 13-46

Close Access to Number 2 Left or Right
Suspension Torsion Bar, 13-50

Close Access to Number 3, 4, 5, or 6 Left
Suspension Torsion Bar, 13-44

Close Access to Number 3, 4, 5, or 6 Right
Suspension Torsion Bar, 13-41

Close Access to Number 7 Left or Right
Suspension Torsion Bar, 13-39

Close, Rear Metal Grilles Open and
Close, 18-42
Open, 18-42

Clutch, Left or Right Angle Gear Box
Assembly Drive Unit and Friction
Installation, 8-27
Removal, 8-25

Combustor Cover Gasket
Installation, 5-38
Removal, 5-37

Combustor or Access Cover and Combustor
Liner
Inspect, 5-40
Installation, 5-42
Removal, 5-39

Combustor Safety Relief Valve
Installation, 5-16
Removal, 5-15

Commander's Control Panel and Bracket
Installation, 9-388
Removal, 9-388

Subject, Page
E (Continued)

Subject, Page

Engine Lubrication System (Continued)

Tube Assembly (Regenerator Drain)

Installation, 5-120

Removal, 5-120

Tube Assembly And Elbow (Starter Drain Valve)

Installation, 5-160

Removal, 5-160

Engine Module Base, Adapter and Swivel Joint

Installation, 4-58

Removal, 4-58

Engine NBC System

Prioritization Valve Check Valve And Cover

Installation, 28-102

Removal, 28-102

Prioritization Valve Filter Element

Installation, 28-104

Removal, 28-104

Prioritization Valve Tube Assembly

Installation, 28-94

Removal, 28-94

Pulse Jet System (Pjs) Prioritization Valve Mounting Bracket

Installation, 28-103

Removal, 28-103

System Prioritization Regulating Valve

Installation, 28-101

Removal, 28-100

Tube Assembly (Diffuser To Prioritization Valve)

Installation, 28-97

Removal, 28-96

Tube Assembly (Prioritization Valve To Sponson)

Installation, 28-99

Removal, 28-99

Tubing Shield

Installation, 28-95

Removal, 28-95

Engine Oil / Filter

Installation, 25-25

Removal, 25-25

Subject, Page E (Continued)

Engine Oil Cooler, Tube Assemblies, and Hoses
 Cooler Inlet And Outlet Tube Assembly (Right Side)
 Installation, 5-184
 Removal, 5-183
 Cooler Inlet Or Outlet Tube Assembly (Crossover)
 Installation, 5-182
 Removal, 5-181
 Cooler Inlet Or Outlet Tube Assembly (Left Side)
 Installation, 5-180
 Removal, 5-179
 Generator Oil Inlet Hose Assembly
 Installation, 5-186
 Removal, 5-185
 Generator Oil Outlet Hose Assembly
 Installation, 5-187
 Removal, 5-187
 Oil Cooler
 Installation, 5-177
 Removal, 5-176
 Turbine Heat Shield
 Installation, 5-189
 Removal, 5-188

Engine Oil Pump Assembly
 Installation, 5-134
 Removal, 5-132

Engine Rear Exhaust Duct Seals
 Installation, 4-1
 Removal, 4-1

Engine Resilient Mount
 Installation, 5-167
 Removal, 5-166

Engine RPM, LPU
 Check/Adjust, 25-81

Engine Sensors and Switches
 Engine Electrical Speed Pickup No. 1 Or 2
 Installation, 5-170
 Engine Electrical Speed Pickup No. 1 Or 2
 Removal, 5-170
 Filter Bypass Pressure Switch
 Installation, 5-172
 Removal, 5-172
 Liquid Float Switch
 Installation, 5-175
 Removal, 5-175
 Oil Pressure-Thermal Switch
 Installation, 5-171
 Removal, 5-171

Subject, Page E (Continued)

Engine Sensors and Switches (Continued)
 Oil Temperature Transmitter
 Installation, 5-168
 Removal, 5-168
 Temperature Rotor Sensor
 Installation, 5-169
 Removal, 5-169

**Subject, Page
E (Continued)**

Engine Sensors and Switches (Continued)
 Thermostat (Temperature Control Valve)
 Installation, 5-174
 Removal, 5-173

Engine Starter
 Installation, 9-41
 Removal, 9-38

Engine Step Plate
 Installation, 4-11
 Removal, 4-11

Equipment Description and Data, 1-13

Exchanger, NBC Heat
 Installation, 28-35
 Removal, 28-34

Exciter, Ignition
 Installation, 9-37
 Removal, 9-37

Exhaust Duct Door Assembly Panel
 Installation, 4-2
 Removal, 4-2

Exhaust Duct Nut, Covers, Screw Assembled
 Chain, and Washer
 Installation, 4-3
 Removal, 4-3

Exhaust Duct Seal
 Installation, 18-58
 Removal, 18-58

Exhaust Pipe
 Installation, 25-10
 Removal, 25-10

Expendable Supplies and Materials List, C-1

Eye Bolt
 Installation, 23-73
 Removal, 23-73

Eye, Front or Rear Battery Access Door Pad
 Installation, 18-34
 Removal, 18-33

Eye, Transmission Lifting
 Installation, 10-46
 Removal, 10-45

F

Fabrication, Over-Size Basic Patch
 Fabrication, 18-164
Index-32

**Subject, Page
F (Continued)**

Fabrication, Over-Size Standoff Patch, 18-162

Fan
 Installation, 25-7
 Removal, 25-7

Fan, Close Access to NBC Heat Exchanger,
 Tubeaxial Fan, and Discharge
 Close Access, 28-42

Fan, Discharge
 Installation, 28-37
 Removal, 28-37

Fan, Gain Access to NBC Heat Exchanger,
 Tubeaxial Fan, and Discharge
 Gain Access, 28-32

Fan, Left or Right Oil Cooler Transmission
 Installation, 8-29
 Removal, 8-28

Fan, Pulse Jet System (PJS) Tubeaxial
 Installation, 6-73
 Removal, 6-71

Fan, Tubeaxial
 Installation, 28-36
 Removal, 28-36

Fault Message Index, Built-in Diagnostics,
 3-27

Feedback Control Assembly Protection
 Bellows
 Installation, 5-89
 Removal, 5-88

Feed-Through Plate and Plate
 Installation, 9-376
 Removal, 9-374

Felt, Lifting Mechanism Housing Mechanical
 Installation, 19-42
 Removal, 19-42

Fender, Left or Right Large Front Vehicular
 Installation, 18-135
 Removal, 18-135

Fender, Small Front Vehicular
 Installation, 18-128
 Removal, 18-128

Fender, Sponson or
 Repair, 18-189

Subject, Page
L (Continued)

Liner, Combustor or Access Cover and Combustor
 Inspect, 5-40
 Installation, 5-42
 Removal, 5-39

Lines, Launcher Power Unit (LPU) Fuel
 Installation, 7-261
 Removal, 7-261

Link, Bleed Actuator Lever Assembly and Inlet Guide Vane Actuator
 Installation, 5-93
 Removal, 5-92

Link, Left or Right Track Adjusting
 Installation, 13-140
 Removal, 13-139

Link, Rear Arm Antenna Boom Locating
 Installation, 26-4
 Removal, 26-4

Link, Rigid Connecting
 Installation, 28-12
 Removal, 28-12

Link, Track Adjusting
 Assembly, 13-144
 Disassembly, 13-143

Linkage (Auxiliary Arm Resolver)
 Adjust, 17-128

Linkages, Steering,
 Adjust, 14-45

Links, Inlet Air Exhaust Manifold and Rigid Connecting
 Installation, 28-16
 Removal, 28-14

Liquid Float Switch
 Installation, 5-175
 Removal, 5-175

Liquid Level Gauge
 Installation, 23-68
 Removal, 23-68

Liquid Level Indicator
 Installation, 23-70
 Removal, 23-70

Liquid Rod-Cap Gage Tube Assembly
 Installation, 10-51
 Removal, 10-50

Subject, Page
L (Continued)

List, Expendable Supplies and Materials, C-1

Locate Brackets
 Locate, 18-181

Locate Hinges, 18-177

Lock Handle
 Installation, 18-210
 Removal, 18-210

Lock Handle
 Installation, 23-55
 Removal, 23-55

Lock, Parking Brake
 Assembly, 12-21
 Disassembly, 12-19
 Installation, 12-18
 Removal, 12-17

Lock, Periscope Lock or Driver's Hatch
 Installation, 19-31
 Removal, 19-30

Lock, Spade Travel
 Installation, 20-7
 Removal, 20-7

Locking Bolt
 Installation, 18-206
 Removal, 18-206

Loop, Driver's NBC Mask Stowage Webbing Strap and Strap Fastener
 Installation, 19-145
 Removal, 19-145

Loose or Missing Hub Bolts
 Removal, 13-158

Low Main Pressure Switch
 Installation, 10-3
 Removal, 10-3

Lower Access Covers
 Installation, 17-122
 Removal, 17-122

Lower Ballistics Cover
 Installation, 17-198
 Removal, 17-198

**Subject, Page
L (Continued)**

Lower Cushion
Installation, 19-103
Removal, 19-103

Lower Domelight Housing Special Seal
Installation, 9-155
Removal, 9-155

Lower Fan Assembly Airflow Baffle
Installation, 8-2
Removal, 8-2

Lower Front Access Cover
Installation, 17-121
Removal, 17-121

Lower Rear Wiring Harness Track
Installation, 9-51
Removal, 9-51

Lower Seat Back Cushion
Installation, 19-70
Removal, 19-70

Lower Seat Frame
Installation, 19-107
Removal, 19-107

Lower Side Air Baffle
Installation, 8-5
Removal, 8-5

Lower Side Wiring Harness Bracket
Installation, 9-49
Removal, 9-47

LPU Ballistic Cover
Installation, 25-51
Removal, 25-51

LPU Circuit Breaker and Bracket
Installation, 9-399
Removal, 9-398

LPU Compartment Fire Extinguisher Control
Cable Assembly
Adjust, 27-71
Installation, 27-70
Removal, 27-68

LPU Compartment Fire Extinguisher
Responder
Installation, 27-3
Removal, 27-3

LPU Compartment Fuel Sensor
Installation, 25-73
Removal, 25-72

Index-68 Change 1

**Subject, Page
L (Continued)**

LPU Cover Air Inlet Cover
Installation, 25-55
Removal, 25-55

LPU Cover Louver Door
Installation, 25-52
Removal, 25-52

LPU Cover Side Door
Assembly, 25-56
Disassembly, 25-56
Installation, 25-56
Removal, 25-56

LPU Cover Top Forward Door
Installation, 25-53
Removal, 25-53

LPU Cover Top Rear Access Door
Installation, 25-54
Removal, 25-54

LPU Electrical
LPU Circuit Breaker And Bracket
Installation, 9-399
Removal, 9-398
LPU Regulator And Bracket
Installation, 9-397
Removal, 9-397
LPU Terminal Board, Mount, And Spacer
Installation, 9-401
Removal, 9-400
Negative (LPU) Cable
Installation, 9-403
Removal, 9-403
Positive (LPU) Cable
Installation, 9-402
Removal, 9-402

LPU Engine RPM
Check/Adjust, 25-81

Subject, Page
(Continued)

LPU Fire Extinguisher Hose Assembly (Valve and Bottle to Union)
Installation, 27-20
Removal, 27-20

LPU Fire Extinguisher Manual Control Handle, Bellcrank, Remote Control Lever, and Bracket
Installation, 27-74
Removal, 27-72

LPU Fire Extinguisher Support Bracket and Straps
Installation, 27-46
Removal, 27-46

LPU Fire Extinguisher Tube Assembly (Hose to Check Valve)
Installation, 27-19
Removal, 27-19

LPU Fire Extinguisher Valve and Bottle Assembly
Installation, 27-43
Removal, 27-42

LPU Fuel Tank
Installation, 25-75
Removal, 25-74

LPU Regulator and Bracket
Installation, 9-397
Removal, 9-397

LPU Terminal Board, Mount, and Spacer
Installation, 9-401
Removal, 9-400

Lubricating Oil Tank Assembly
Installation, 5-138
Removal, 5-136

Lubrication Instructions, Preventive Maintenance Checks And Services (PMCS), and Mandatory Replacement Parts, 2-11

M

M43 Detector Unit
Installation, 24-24
Removal, 24-24

Machine Thread Plug (Accessory Gearbox Drain)
Installation, 5-125
Removal, 5-125

Subject, Page
M (Continued)

Main Hydraulic Hose
Installation, 17-95
Removal, 17-95

Main Regulator Valve Assembly
Installation, 10-43
Removal, 10-43

Subject, Page
M (Continued)

Maintenance Allocation Chart (MAC), B-1

Maintenance Indicator Branched Wiring Harness 3W107
Installation, 9-368
Removal, 9-366

Maintenance, Semiannual NBC Sponson
Clean, 28-106
Inspect, 28-107

Manifold
Installation, 28-88
Removal, 28-87

Manifold (Common)
Installation, 17-179
Removal, 17-178

Manifold (Left Center)
Installation, 17-48
Removal, 17-48

Manifold (Left Forward)
Installation, 17-47
Removal, 17-46

Manifold (Left Front)
Installation, 17-114
Removal, 17-114

Manifold (Left Rear)
Installation, 17-44
Removal, 17-44

Manifold (Left Rear)
Installation, 17-116
Removal, 17-116

Manifold (Lower Left Rear)
Installation, 17-43
Removal, 17-42

Manifold (Right Center)
Installation, 17-45
Removal, 17-45

Manifold (Right Forward)
Installation, 17-40
Removal, 17-39

Manifold (Right Front)
Installation, 17-113
Removal, 17-113

Manifold (Right Rear)
Installation, 17-41
Removal, 17-41

Subject, Page
M (Continued)

Manifold (Right Rear)
Installation, 17-115
Removal, 17-115

Manifold Assembly
Installation, 24-22
Removal, 24-22

Manifold Preheater
Installation, 25-22
Removal, 25-22

Manifold Swivel-Left
Installation, 17-181
Removal, 17-181

**Subject, Page
M (Continued)**

Manifold Swivel-Right
Installation, 17-182
Removal, 17-182

Manifold, Air Exhaust
Installation, 24-10
Removal, 24-9

Manifold, Bridge Drive
Installation, 17-146
Removal, 17-145

Manifold, Common
Installation, 17-111
Removal, 17-109

Manifold, Fire Extinguisher
Installation, 27-48
Removal, 27-47

Manifold, Hydraulic Distribution
Installation, 23-79
Removal, 23-77

Manifold, Hydraulic Module Filter
Installation, 23-75
Removal, 23-74

Manifold, Inlet
Installation, 23-86
Removal, 23-84

Manifold, Spade Control
Installation, 20-19
Removal, 20-18

Manual Control Handle
Installation, 21-39
Removal, 21-38

Manual Control Lever
Installation, 19-86
Removal, 19-85

Manual Troubleshooting Procedures, 3-841

Marker
Installation, 15-34
Removal, 15-34

Marker, Calibration
Installation, 17-86.1
Removal, 17-86.1

Marker, Emergency Engine Shutoff
Identification
Installation, 7-209
Removal, 7-209

Index-70 Change 1

**Subject, Page
M (Continued)**

Marker, Identification (Before Engine Shutdown)
Installation, 9-50
Removal, 9-50

Master Control Station Amplifier
Installation, 9-393
Removal, 9-393

Meals Ready Stowage Rack
Installation, 19-124
Removal, 19-124

Mechanism, Driver's Hatch Lifting
Installation, 19-16
Removal, 19-15

Mechanism, Lifting
Assembly, 19-20
Disassembly, 19-18

Mechanism, Lifting
Assembly, 19-25
Disassembly, 19-22

Metal Grille Hook Screw
Installation, 18-59
Removal, 18-59

Middle NBC Sponson Access Cover
Installation, 18-66
Removal, 18-65

Mirror Assembly, Unity or Tank Periscope
Installation, 19-44
Removal, 19-44

Mirror, Laying Arm
Installation, 21-46
Removal, 21-46

Mirror, Rear View
Installation, 21-47
Removal, 21-47

Subject, Page M (Continued)

Modulator Directional Linear Valve
Installation, 10-34
Removal, 10-34

Module (AIM) 2A110, Analog Input
Installation, 9-100
Removal, 9-99

Module (RSM) 2A103, Remote Switching
Installation, 9-74
Removal, 9-73

Module (RSM) 2A104, Remote Switching
Installation, 9-76
Removal, 9-75

Module (RSM) 2A102, Remote Switching
Installation, 9-72
Removal, 9-71

Module, Hydraulic
Installation, 23-63
Removal, 23-61

Module, Water Separator Control
Installation, 7-218
Removal, 7-217

Motor Cover
Installation, 17-138
Removal, 17-138

Mount Assembly, Hull Engine
Installation, 5-165
Removal, 5-165

Mount Assembly, Wiper
Adjust, 21-42
Assembly, 21-41
Disassembly, 21-40

Mount Or Coupling (Rear Arm Resolver)
Installation, 17-183
Removal, 17-183

Mount, Driver's Vision Enhancer (DVE)
Storage
Installation, 19-125
Removal, 19-125

Mount, Engine Resilient
Installation, 5-167
Removal, 5-166

Mount, Front Shock
Installation, 25-17
Removal, 25-17

Subject, Page M (Continued)

Mount, Headlight
Installation, 9-130
Removal, 9-130

Mount, NBC Heat Exchanger Resilient
Installation, 28-38
Removal, 28-38

Mount, Rear Arm Antenna Boom Pivot
Installation, 26-3
Removal, 26-2

Mount, Rear Shock
Installation, 25-16
Removal, 25-12

Mount, SINCGARS Or EPLRS Antenna
Installation, 26-8
Removal, 26-8

Mounting Bracket and Locating Pin
Installation, 19-110
Removal, 19-110

Mounting Plate
Installation, 28-18
Removal, 28-18

Mounting Plate (Antenna Harnesses)
Installation, 17-86.2
Removal, 17-86.2

Multi-Turn Resolver Mounting Adapter
Installation, 17-126
Removal, 17-126

N

NATO Connector
Bracket
Installation, 9-412
Removal, 9-411

Forward Battery Instruction Plate
Installation, 9-413
Removal, 9-413

NATO Connector
Installation, 9-404
Removal, 9-404

NATO Connector Box And Insulator
Installation, 9-405
Removal, 9-405

**Subject, Page
N (Continued)**

NATO Connector (Continued)
 NATO Connector Box Cover
 Installation, 9-406
 Removal, 9-406
 NATO Connector Box Cover Handle
 Installation, 9-409
 Removal, 9-409
 NATO Connector Box Plate
 Installation, 9-407
 Removal, 9-407
 NATO Connector Protective Cap
 Installation, 9-410
 Removal, 9-410
 Protective Cap For 2W170
 Installation, 9-414
 Removal, 9-414
 Stowage Receptacle
 Installation, 9-408
 Removal, 9-408

 NATO Connector Box and Insulator
 Installation, 9-405
 Removal, 9-405

 NATO Connector Box Cover
 Installation, 9-406
 Removal, 9-406

 NATO Connector Box Cover Handle
 Installation, 9-409
 Removal, 9-409

 NATO Connector Box Plate
 Installation, 9-407
 Removal, 9-407

 NATO Connector Protective Cap
 Installation, 9-410
 Removal, 9-410

 NBC Check Valve
 Installation, 28-11
 Removal, 28-11

 NBC Connector Assembly Holder
 Installation, 24-19
 Removal, 24-19

 NBC Duct
 Installation, 24-14
 Removal, 24-14

 NBC Duct Assembly
 Installation, 24-30
 Removal, 24-29

**Subject, Page
N (Continued)**

NBC Duct Boot and Nonmetallic Hose (Air Inlet Manifold to Tube Assembly)
 Installation, 28-10
 Removal, 28-10

 NBC Filter Support Assembly
 Air Exhaust Manifold Mounting Support
 Installation, 28-13
 Removal, 28-13
 Gas-Particulate Filters
 Installation, 28-8
 Removal, 28-7
 Inlet Air Exhaust Manifold And Rigid Connecting Links
 Installation, 28-16
 Removal, 28-14
 Mounting Plate
 Installation, 28-18
 Removal, 28-18
 NBC Check Valve
 Installation, 28-11
 Removal, 28-11
 NBC Duct Boot And Nonmetallic Hose (Air Inlet Manifold To Tube Assembly)
 Installation, 28-10
 Removal, 28-10
 NBC Tube Assembly And Duct Boot
 Inspection, 28-9
 Outlet Air Exhaust Manifold Or Hose
 Installation, 28-6
 Removal, 28-6
 Rigid Connecting Link
 Installation, 28-12
 Removal, 28-12

 NBC Heat Exchanger
 Installation, 28-35
 Removal, 28-34

 NBC Heat Exchanger Resilient Mount
 Installation, 28-38
 Removal, 28-38

 NBC Heat Exchanger Support
 Installation, 28-39
 Removal, 28-39

 NBC Hose (NBC Duct to Tube)
 Installation, 24-17
 Removal, 24-17

 NBC Hose (P/N C5-19-916 Size 2)
 Installation, 24-18
 Removal, 24-18

Subject, Page
P (Continued)

Subject, Page

Pin, Mounting Bracket and Locating
(Continued)
Removal, 19-110

Pin, Number 1 Left or Right Fender Skirt
Grab Hook Swivel
Installation, 18-90
Removal, 18-89

Pintle Assembly, Tow
Assembly And Installation, 16-3
Removal And Disassembly, 16-2

Pipe, Exhaust
Installation, 25-10
Removal, 25-10

Pivot Frame
Installation, 17-130
Removal, 17-130

Pivot Stop
Installation, 19-40
Removal, 19-39

Plate and/or Mounting Bracket (Left Rear
Fuel Filler)
Installation, 25-80
Removal, 25-80

Plate Assembly, Engine Compartment Fuel
Tank Mounting
Installation, 7-140
Removal, 7-139

Plate Assembly, Front Fuel Inlet Cover
Mounting
Installation, 7-67
Removal, 7-65

Plate Assembly, Left or Right Front Fuel Tank
Mounting
Installation, 7-69
Removal, 7-68

Plate Assembly, Roadwheel or Idler Wheel
Wear
Assembly, 13-169
Disassembly, 13-168
Installation, 13-167
Removal, 13-166

Plate Spacer (In-Line Pressure Fluid Filter to
Liquid/Water Separator Tube Assembly)
Installation, 5-77
Removal, 5-77

**Subject, Page
P (Continued)**

Plate (ROS)
Installation, 18-221
Removal, 18-221

Plate, Bulkhead
Installation, 17-86.3
Removal, 17-86.3

Plate, Circuit Breaker Access Cover
Identification
Installation, 9-108
Removal, 9-108

Plate, Cover
Installation, 17-211
Removal, 17-211

Plate, Crew Floor (No. 1)
Installation, 19-126
Removal, 19-126

Plate, Crew Floor (No. 2)
Installation, 19-127
Removal, 19-127

Plate, Crew Floor (No. 3)
Installation, 19-128
Removal, 19-128

Plate, Crew Floor (No. 4)
Installation, 19-129
Removal, 19-129

Plate, Crew Floor (No. 5)
Installation, 19-130
Removal, 19-130

Plate, Crew Floor (No. 6)
Installation, 19-131
Removal, 19-131

Plate, Crew Floor (No. 7)
Installation, 19-132
Removal, 19-132

Plate, Crew Floor (No. 8)
Installation, 19-133
Removal, 19-133

Plate, Crew Floor (No. 9)
Installation, 19-134
Removal, 19-134

Plate, Crew Floor (No. 10)
Installation, 19-135
Removal, 19-135

Plate, Crew Floor (No. 11)
Installation, 19-136

**Subject, Page
P (Continued)**

Plate, Crew Floor (No. 11) (Continued)
Removal, 19-136

Plate, Crew Floor (No. 12)
Installation, 19-137
Removal, 19-137

Plate, Crew Floor (No. 13)
Installation, 19-138
Removal, 19-138

Plate, Crew Floor (No. 14)
Installation, 19-139
Removal, 19-139

**Subject, Page
P (Continued)**

Plate, Disconnect Panel Identification
Installation, 9-115
Removal, 9-114

Plate, Engine Step
Installation, 4-11
Removal, 4-11

Plate, Feed-Through Plate and
Installation, 9-376
Removal, 9-374

Plate, Fire Wire Mounting
Installation, 25-44
Removal, 25-44

Plate, Forward Battery Instruction
Installation, 9-413
Removal, 9-413

Plate, Inlet Guide Vane Stop
Installation, 5-95
Removal, 5-95

Plate, Instruction
Installation, 9-187
Removal, 9-187

Plate, Launcher Power Unit (LPU) Fuel
Solenoid Valve and
Installation, 7-263
Removal, 7-263

Plate, Launcher Power Unit Guillotine
Installation, 25-71
Removal, 25-70

Plate, Mounting
Installation, 28-18
Removal, 28-18

Plate, Mounting (Antenna Harnesses)
Installation, 17-86.3
Removal, 17-86.3

Plate, NATO Connector Box
Installation, 9-407
Removal, 9-407

Plate, NBC Mounting
Installation, 28-92
Removal, 28-91

Plate, NBC Sponson Air Inlet Armor
Installation, 18-25
Removal, 18-25

**Subject, Page
P (Continued)**

Plate, Number 6 Left or Right Fender Skirt
Rubber Strip or Top Closure
Installation, 18-119
Removal, 18-119

Plate, Shaft Retaining
Installation, 10-45
Removal, 10-44

Plate, Sleeve Bearings, Collar, and Hinge
Installation, 18-216
Removal, 18-215

Plate, Spade Skid
Installation, 20-10
Removal, 20-10

Plate, Spade Wing Skid
Installation, 20-32
Removal, 20-32

Plate, Sponson Cover Armor
Installation, 18-72
Removal, 18-71

Plate, Throttle Steering Control Cover
Instruction
Installation, 14-52
Removal, 14-52

Plate, Warning Instruction
Installation, 9-109
Removal, 9-109

Plenum and Air Box
Close Access To Bottom Of Plenum And Air
Box
Close Access, 6-54
Gain Access To Bottom Of Plenum And Air
Box
Gain Access, 6-32
Plenum And Air Box And Mounting
Brackets
Installation, 6-44
Removal, 6-37